

# FUJITSU



## UPFLOW/ HORIZONTAL GAS FURNACE

### Features

- 80% residential Gas Furnace CSA certified
- 3 way multi poise design UF / HZ
- 7 Segment LED all units
- Direct Spark Ignition for reliability and longevity
- Heat exchanger is removable for improved serviceability. Aluminized steel construction provides maximum corrosion resistance and thermal fatigue reliability.
- Solid doors provide quiet operation
- Low profile 34" cabinet ideal for space constrained installations
- Blower shelf design – serviceable in all furnace orientations
- Hemmed edges on cabinets and doors
- 1/4 turn door knobs for tool less access
- Integrated Controls board features dip switches for easy system set up
- QR codes for quick access to product information from your smart phone or tablet

†A.F.U.E. (Annual Fuel Utilization Efficiency) calculated in accordance with Department of Energy test procedures.

### FF\*\*\*PS80 Series


80% A.F.U.E.†

Input Rates 50-150 kBTU

Manufactured for


**Fujitsu General America, Inc.**

Fairfield, NJ



## TABLE OF CONTENTS

Standard & Optional Equipment .....	3
Model Features/Physical Data & Specifications .....	4
Model Number Identification .....	5
Dimensional Data .....	6-7
Blower Performance Data .....	8
Accessories.....	9
Limited Warranty .....	10

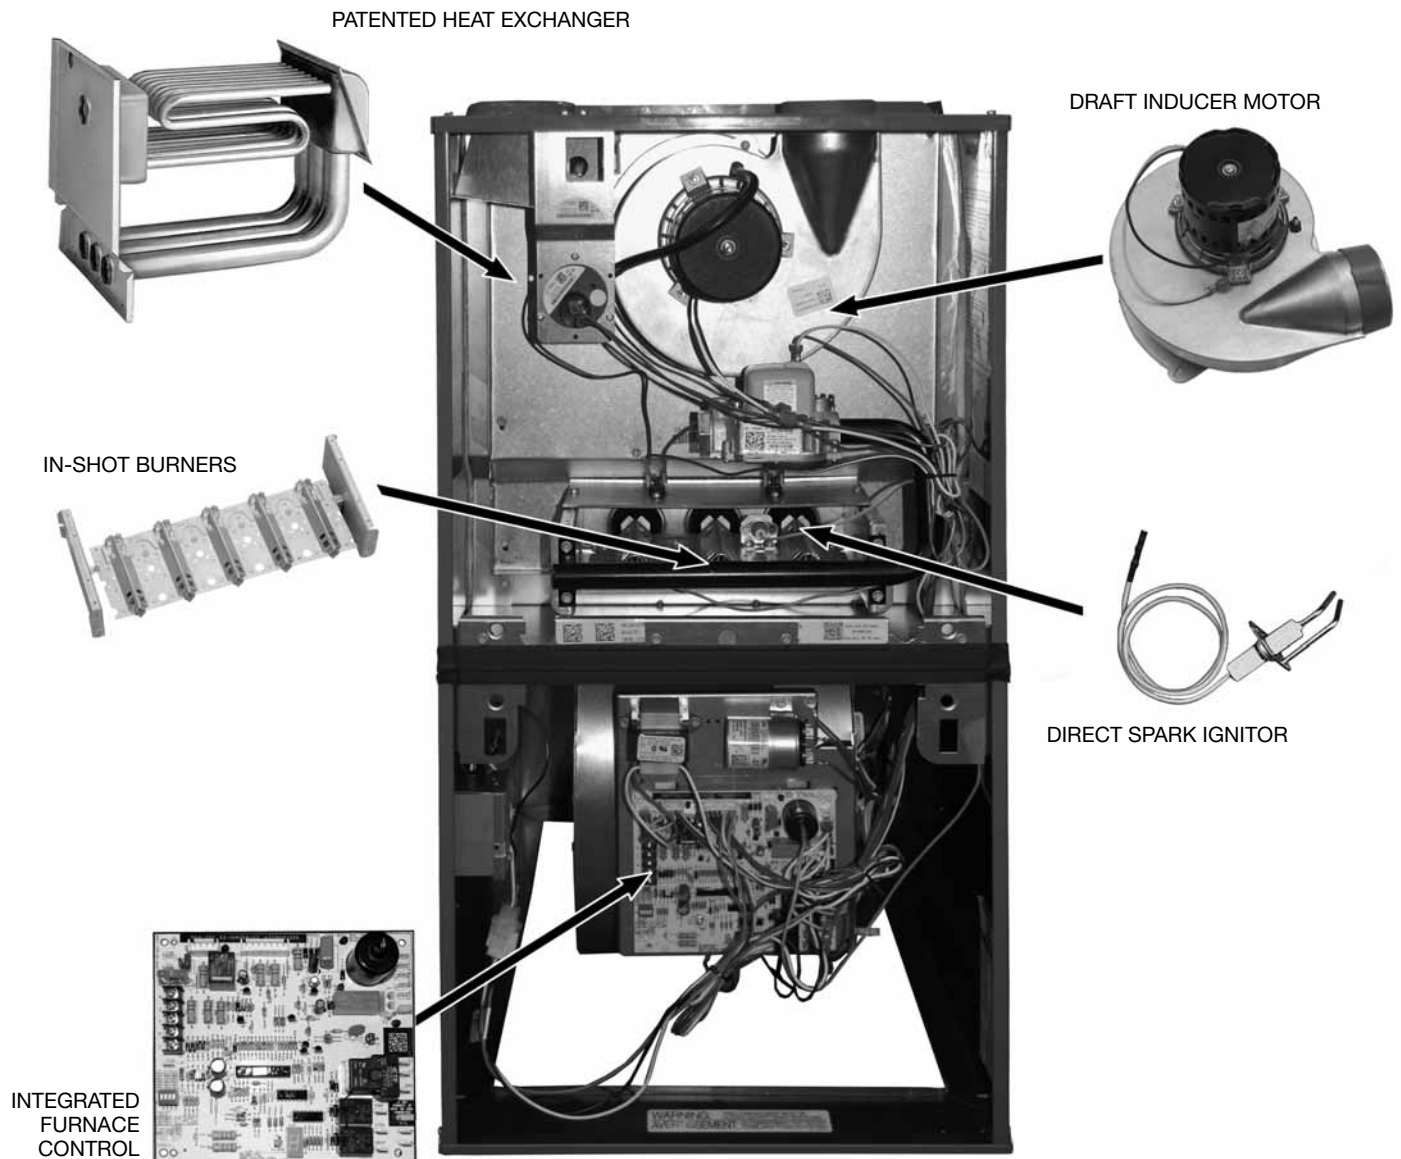

## STANDARD EQUIPMENT

Completely assembled and wired; induced draft; pressure switch; redundant main gas control; blower compartment door safety switch; solid state time on/time off blower control; limit control; manual shut-off valve, pressure regulator for natural and L.P. (propane) gas; transformer; direct drive multi-speed blower motor. Furnaces are equipped with cooling/heating relay and transformer (40VA) ready for air conditioning applications. (Please note: a thermostat is not included as standard equipment.) Flame sensor diagnostics.

## OPTIONAL EQUIPMENT

Side and bottom filter frame assembly. Return air cabinet for all sizes.  
NOTE: Furnace is not listed for use with fuels other than natural or L.P. (propane) gas.

The complete terms of limited and other warranties are available at our sales office, or through local installer.

All models can be converted by a qualified Rheem distributor or local service dealer to use L.P. (propane) gas without changing burners. Factory approved kits must be used to convert from natural to L.P. (propane) gas and may be ordered as optional accessories from a Rheem parts distributor.

For L.P. (propane) operation, refer to Conversion Kit Index Form.

NOTE: For natural and L.P. (propane) gas models, direct spark ignition is 100% safety lockout type.

## WARNING

THIS FURNACE IS NOT APPROVED  
OR RECOMMENDED  
FOR USE IN MOBILE HOMES

## Model Features

- 80% residential Gas Furnace CSA certified
- 3 way multi poise design UF / HZ
- 7 Segment LED all units
- Direct Spark Ignition for reliability and longevity
- Heat exchanger is removable for improved serviceability. Aluminized steel construction provides maximum corrosion resistance and thermal fatigue reliability.
- Solid doors provide quiet operation
- Low profile 34" cabinet ideal for space constrained installations
- Blower shelf design serviceable in all furnace orientations
- Hemmed edges on cabinets and doors
- 1/4 turn door knobs for tool less access
- Integrated Controls board features dip switches for easy system set up
- QR codes for quick access to product information from your smart phone or tablet

## Physical Data and Specifications

MODEL NUMBERS SERIES	FF50143PS80*	FF75173PS80*	FF751743PS80*	FF100174PS80*	FF100215PS80*	FF5125245PS80*	FF150245PS80*
Input-BTU/Hr ②	50,000	75,000	75,000	100,000	100,000	125,000	150,000
Heating Capacity BTU/Hr ①	41,000	61,000	61,000	82,000	81,000	101,000	122,000
Heat Ext. Static Pressure	.18	.20	.20	.28	.28	.28	.28
Blower (D x W)	11 x 6	11 x 7	11 x 7	11 x 7	11 x 10	11 x 10	11 x 10
Motor H.P.–Speed–Type	1/3-4-PSC	1/2-4-PSC	1/2-4-PSC	1/2-4-PSC	1/2-4-PSC	3/4-4-PSC	3/4-4-PSC
Min Circuit Ampacity	9	10	9	11	9	12	13
Min. Overload Protection	15	15	15	15	15	15	15
Max. Overload Protection	15	15	15	15	15	15	20
Motor Full Load Amps	5.7	6.7	7.8	7.8	7.5	8.4	9.3
Heating Speed	Med-Low	Med-High	Med-High	Med-High	Med-Low	Med-High	Med-High
Cooling Speed	High	Med-High	High	Med-High	High	High	High
Cooling CFM @ .70" W.C. E.S.P.	1164	1198	1657	1292	1807	1742	1916
Max. E.S.P. (In. W.C.)	0.8	0.8	0.8	0.8	0.8	0.8	0.8
Temperature Rise Range °F	25-55	25-55	25-55	35-65	35-65	35-65	45-75
Max. Outlet Air Temp. °F	155	155	155	165	180	165	190
Approx. Shipping Weight (Lbs.)	110	110	125	110	140	150	160
AFUE ①	80.0%	80%	80.0%	80.0%	80.0%	80.0%	80.0%

NOTES: All models are 115V, 60HZ, 1 Ph. Gas connection size for all models is 1/2" N.P.T.

① In accordance with D.O.E. test procedures.

② See Conversion Kit Index Form for high altitude derate.

\* S = Standard, X = Low Nox

## Model Number Identification

<u>FF</u>	<u>50</u>	<u>17</u>	<u>3</u>	<u>T</u>	<u>S</u>	<u>80</u>	<u>M</u>
Product	Capacity	Width	Airflow	Motor	Speed	Efficiency	Orientation
Furnace	50 = 50,000 [14.65 kW] 75 = 75,000 [21.98 kW] 100 = 100,000 [29.31 kW] 125 = 125,000 [36.63 kW] 150 = 150,000 [43.96 kW]	14" 17" 21" 24"	3 = 3 Ton 4 = 4 Ton 5 = 5 Ton	P = PSC	S = Single Stage	80 = 80%	M = Multipoise X = Multipoise (Low NO <sub>x</sub> )

[ ] Designates Metric Conversions

## Upflow Application

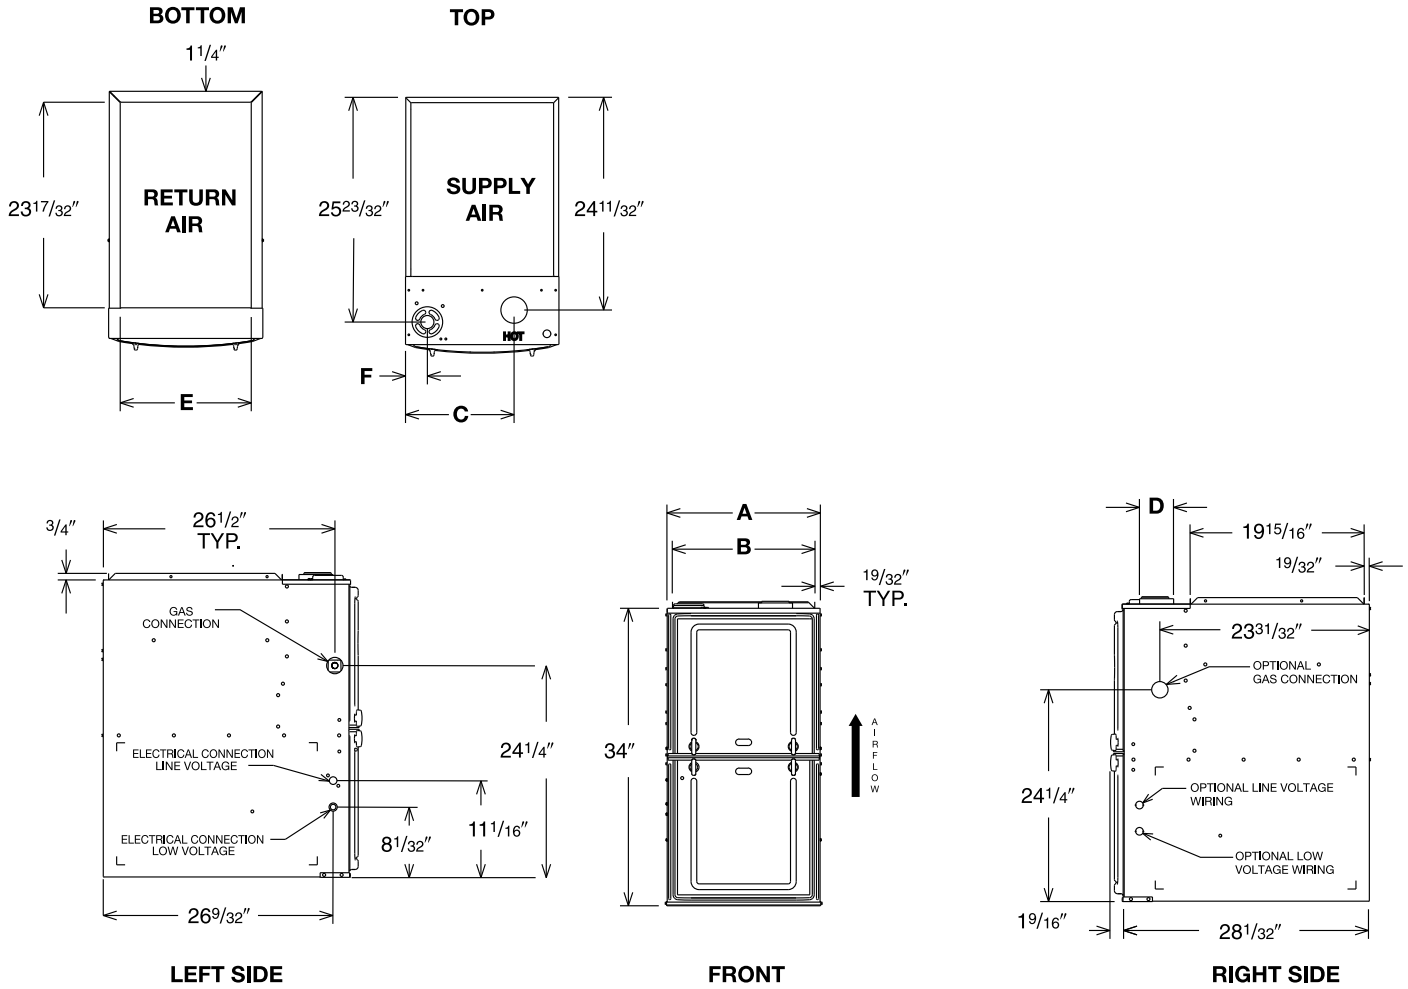


Illustration  
 ST-A1220-04-00  
 FIGURE 1

## Dimensional Data: Upflow Model

MODEL FF***PS80	A	B	C	D	E	F	MINIMUM CLEARANCE (IN.)						SHIP WGTS. (LBS.)
							LEFT SIDE	RIGHT SIDE	BACK	TOP	FRONT	VENT	
050	14	12 <sup>27</sup> / <sub>32</sub>	10 <sup>5</sup> / <sub>8</sub>	①	11 1/2	1 7/8	0	4 ②	0	1	3	6 ③	85
075/ 100417	17 1/2	16 <sup>11</sup> / <sub>32</sub>	12 <sup>3</sup> / <sub>8</sub>	①	15	2 1/2	0	3 ②	0	1	3	6 ③	105
10052	21	19 <sup>27</sup> / <sub>32</sub>	14 <sup>1</sup> / <sub>8</sub>	①	18 1/2	2 1/2	0	0	0	1	3	6 ③	120
125	24 1/2	23 <sup>11</sup> / <sub>32</sub>	15 <sup>7</sup> / <sub>8</sub>	①	22	2 1/2	0	0	0	1	3	6 ③	140
150	24 1/2	23 <sup>11</sup> / <sub>32</sub>	15 <sup>7</sup> / <sub>8</sub>	①	22	2 1/2	0	0	0	1	3	6 ③	150


NOTES: ① May require a 3" to 4" or 3" to 5" adapter. 4"

② May be 0" with type B vent.

③ May be 1" with type B vent.

**Furnaces must be vented in accordance with the National Fuel Gas Code, ANSI Z223.1 and/or Can/CGA-B149 Installation Codes and in accordance with local codes.**

## Horizontal Application

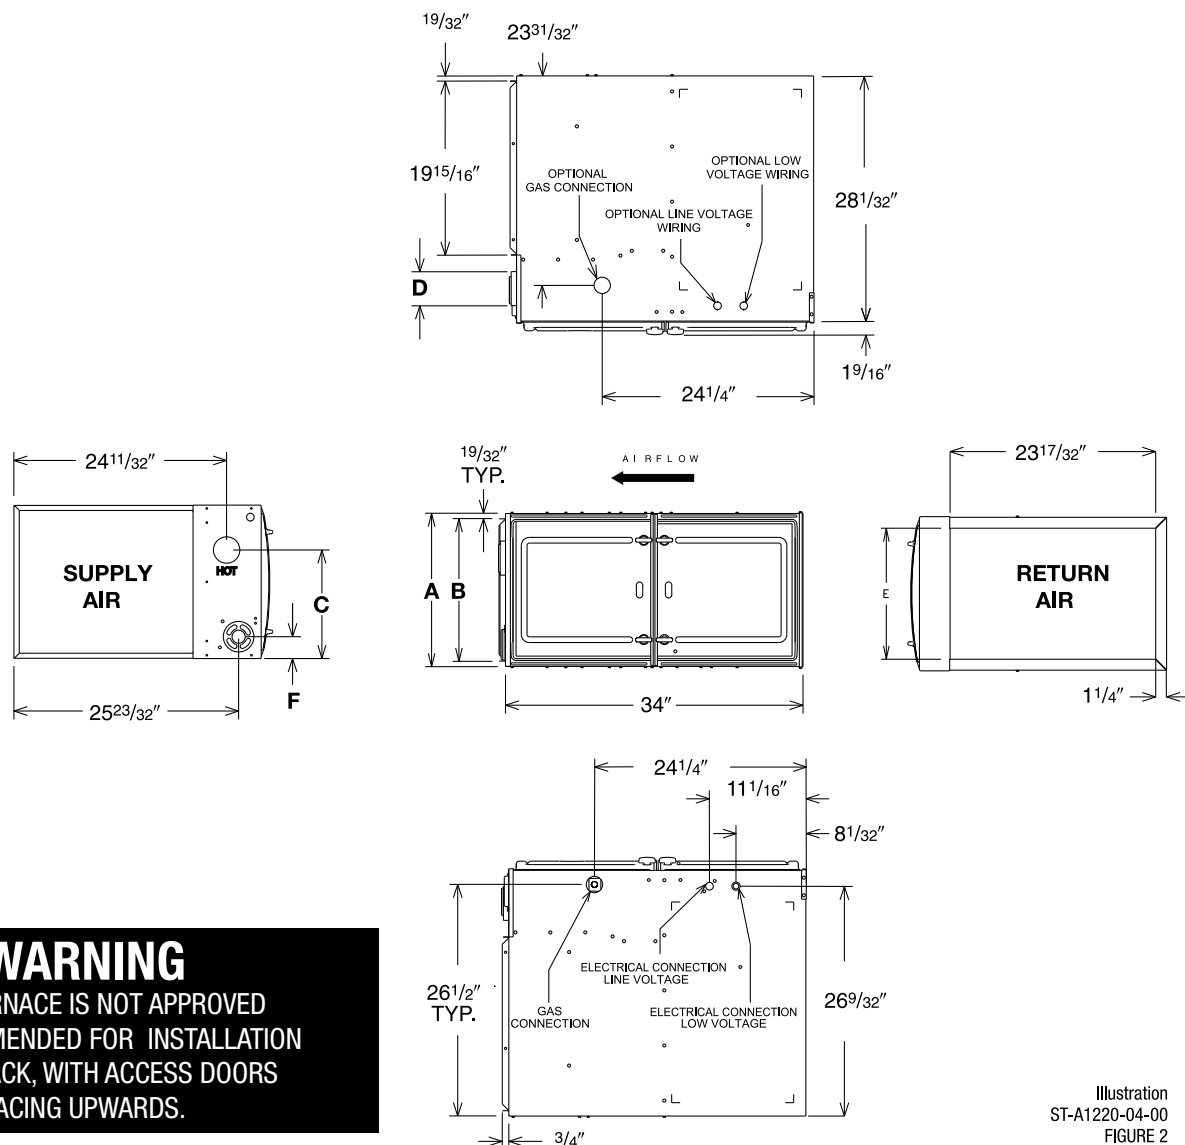

**WARNING**  
THIS FURNACE IS NOT APPROVED  
OR RECOMMENDED FOR INSTALLATION  
ON ITS BACK, WITH ACCESS DOORS  
FACING UPWARDS.

Illustration  
ST-A1220-04-00  
FIGURE 2

## Dimensional Data: Horizontal Model

MODEL FF***PS80	A	B	C	D	E	F	MINIMUM CLEARANCE (IN.)						SHIP WGTS. (LBS.)
							SUPPLY AIR SIDE	RETURN AIR SIDE	BACK	TOP	FRONT	VENT	
050	14	12 <sup>27/32</sup>	10 <sup>5/8</sup>	①	11 <sup>1/2</sup>	1 <sup>7/8</sup>	4 ②	0	0	1	3	6 ③	85
075/ 100417	17 <sup>1/2</sup>	16 <sup>11/32</sup>	12 <sup>3/8</sup>	①	15	2 <sup>1/2</sup>	3 ②	0	0	1	3	6 ③	105
100521	21	19 <sup>27/32</sup>	14 <sup>1/8</sup>	①	18 <sup>1/2</sup>	2 <sup>1/2</sup>	0	0	0	1	3	6 ③	120
125	24 <sup>1/2</sup>	23 <sup>11/32</sup>	15 <sup>7/8</sup>	①	22	2 <sup>1/2</sup>	0	0	0	1	3	6 ③	140
150	24 <sup>1/2</sup>	23 <sup>11/32</sup>	15 <sup>7/8</sup>	①	22	2 <sup>1/2</sup>	0	0	0	1	3	6 ③	150

NOTES: ① May require a 3" to 4" or 3" to 5" adapter. 4" adapter included with (-)801P units.

② May be 0" with type B vent.

③ May be 1" with type B vent.

Furnaces must be vented in accordance with the National Fuel Gas Code, ANSI Z223.1 and/or Can/CGA-B149 Installation Codes and in accordance with local codes.

## Blower Performance Data

MODEL	MOTOR H.P. BLOWER SIZE IN	SPEED TAP	CFM AIR DELIVERY EXTERNAL STATIC PRESSURE INCHES WATER COLUMN							
			0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
FF50143PS80*	1/3 11 x 6	Low	823	803	787	732	718	691	651	593
		<b>Med. Lo</b>	<b>1030</b>	<b>1018</b>	<b>1006</b>	<b>976</b>	<b>929</b>	<b>897</b>	<b>850</b>	<b>808</b>
		Med. Hi	1129	1132	1112	1087	1054	1028	971	919
		High	1361	1353	1331	1297	1264	1232	1164	1117
FF75173PS80*	1/2 11 x 7	Low	1008	977	935	893	854	823	777	735
		Med. Lo	1215	1181	1133	1098	1065	1023	975	937
		<b>Med. Hi</b>	<b>1421</b>	<b>1408</b>	<b>1372</b>	<b>1326</b>	<b>1299</b>	<b>1247</b>	<b>1198</b>	<b>1152</b>
		High	1668	1648	1633	1580	1545	1481	1442	1373
FF51743PS80*	1/2 11 x 7	Low	1229	1200	1181	1155	1120	1078	1013	970
		Med. Lo	1308	1267	1266	1233	1204	1176	1113	1062
		<b>Med. Hi</b>	<b>1553</b>	<b>1542</b>	<b>1516</b>	<b>1491</b>	<b>1451</b>	<b>1417</b>	<b>1358</b>	<b>1306</b>
		High	1969	1924	1893	1840	1803	1728	1657	1570
FF100174PS80*	1/2 11 x 7	Low	1211	1183	1148	1116	1077	1040	984	953
		Med. Lo	1305	1261	1225	1185	1157	1113	1068	1012
		<b>Med. Hi</b>	<b>1520</b>	<b>1498</b>	<b>1464</b>	<b>1427</b>	<b>1387</b>	<b>1340</b>	<b>1292</b>	<b>1226</b>
		High	1874	1810	1767	1686	1678	1650	1582	1497
FF100215PS80*	1/2 11 x 10	Low	1209	1182	1131	1112	1051	976	929	867
		<b>Med. Lo</b>	<b>1438</b>	<b>1420</b>	<b>1386</b>	<b>1350</b>	<b>1320</b>	<b>1293</b>	<b>1248</b>	<b>1186</b>
		Med. Hi	1902	1883	1844	1817	1753	1700	1636	1547
		High	2071	2037	2001	1962	1905	1856	1807	1709
FF125245PS80*	3/4 11 x 10	Low	1358	1354	1331	1301	1250	1224	1154	1089
		Med. Lo	1541	1517	1476	1453	1416	1371	1339	1277
		<b>Med. Hi</b>	<b>1799</b>	<b>1774</b>	<b>1746</b>	<b>1712</b>	<b>1691</b>	<b>1629</b>	<b>1554</b>	<b>1495</b>
		High	2015	1989	1929	1902	1862	1815	1742	1665
FF150245PS80*	3/4 11 x 10	Low	1411	1395	1370	1334	1310	1252	1220	1150
		Med. Lo	1606	1579	1569	1537	1499	1468	1407	1346
		<b>Med. Hi</b>	<b>1889</b>	<b>1891</b>	<b>1849</b>	<b>1828</b>	<b>1764</b>	<b>1717</b>	<b>1659</b>	<b>1609</b>
		High	2178	2160	2105	2067	2024	1976	1916	1832

**Note:** Bold data is factory heating tap. Table represents blower performance data WITHOUT filters.



**SIDE RETURN FILTER RACK: RXGF-CD**

**BOTTOM RETURN FILTER RACK FOR  
 UPFLOW APPLICATION: RXGF-CB**

FILTER RACK FILTER SIZES* INCHES		
MODEL	RXGF-CB (UPFLOW/ HORIZONTAL)	RXGF-CD (UPFLOW) SIDE RETURN
FF5014	12 <sup>1</sup> / <sub>4</sub> x 25	15 <sup>3</sup> / <sub>4</sub> x 25
FF7517/10017	15 <sup>3</sup> / <sub>4</sub> x 25	15 <sup>3</sup> / <sub>4</sub> x 25
FF10021	19 <sup>1</sup> / <sub>4</sub> x 25	15 <sup>3</sup> / <sub>4</sub> x 25
FF12524	22 <sup>3</sup> / <sub>4</sub> x 25	15 <sup>3</sup> / <sub>4</sub> x 25
FF15024	22 <sup>3</sup> / <sub>4</sub> x 25	15 <sup>3</sup> / <sub>4</sub> x 25

**4" FLUE ADAPTER: RXGW-C01**

**INDOOR COIL CASINGS**

MODEL NUMBER
RXBC-D14AI
RXBC-D17AI
RXBC-D21AI
RXBC-D21BI
RXBC-D24AI

**WARNING: IMPORTANT NOTICE**

A SOLID METAL BASE PLATE (SEE TABLE) MUST BE IN PLACE WHEN THE FURNACE IS INSTALLED WITH SIDE AIR RETURN DUCTS. FAILURE TO INSTALL A BASE PLATE COULD CAUSE PRODUCTS OF COMBUSTION TO BE CIRCULATED INTO THE LIVING SPACE AND CREATE POTENTIALLY HAZARDOUS CONDITIONS.

FURNACE WIDTH IN.	SOLID BOTTOM KIT NO.	BASE PLATE NO.	BASE PLATE SIZE IN.
14	RXGB-D14	AE-61874-01	11 <sup>5</sup> / <sub>8</sub> x 23 <sup>9</sup> / <sub>16</sub>
17 <sup>1</sup> / <sub>2</sub>	RXGB-D17	AE-61874-02	15 <sup>1</sup> / <sub>8</sub> x 23 <sup>9</sup> / <sub>16</sub>
21	RXGB-D21	AE-61874-03	18 <sup>5</sup> / <sub>8</sub> x 23 <sup>9</sup> / <sub>16</sub>
24 <sup>1</sup> / <sub>2</sub>	RXGB-D24	AE-61874-04	25 <sup>5</sup> / <sub>8</sub> x 23 <sup>9</sup> / <sub>16</sub>

**FOR HIGH ALTITUDES:**

**OPTION CODE FOR HIGH ALTITUDE:** U.S. & Canada  
 None required for high altitudes.

**HIGH ALTITUDE CONVERSION KITS:** U.S. & Canada  
 None required for high altitudes.

**80+ HIGH ALTITUDE INSTRUCTIONS**

**CAUTION:** Always follow National Fuel Gas Code (NFPA) guidelines when converting for high altitudes.

High altitude option codes are not required for these models. However, the burner orifice size needs to be recalculated and verified at elevations above 2000 ft. See Installation Instructions for more information.

**NOTE:** For Canadian installations only, an optional derate (manifold gas pressure reduction) method may be used to adjust the furnace for altitude. See Installation Instructions for more information. This optional method may **NOT** be used for U.S. installations.

**GENERAL TERMS OF LIMITED WARRANTY\***

*Fujitsu General America, Inc.* will furnish a replacement for any part of this product which fails in normal use and service within the applicable period stated, in accordance with the terms of the limited warranty.

**\*For complete details of the Limited and Conditional Warranties, including applicable terms and conditions, contact your local contractor or the Manufacturer for a copy of the product warranty certificate.**

Conditional Parts\* (Registration Required) .....Ten (10) Years  
Heat Exchanger .....Twenty (20) Years



---

**Before proceeding with installation, refer to installation instructions packaged with each model, as well as complying with all Federal, State, Provincial, and Local codes, regulations, and practices.**

---

*"In keeping with its policy of continuous progress and product improvement, the right is reserved to make changes without notice."*